

 
 



 
 

 

 



 



 
 
 
 
 




 
 








 

 

 

 



 

 
 
 
 


 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Home		Smart
	>>I		>>I
	I<<		I<<
	>>		>>
	<<		<<
	Play		Play
	Pause		Pause
	Rec		Rec
	Stop		Stop
	EPG		Guide
	SAT		Options
	TXT		Text
	Find		Media
	Menu		Menu
	i		Info
	FAV		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Shift		AV
	USB		3D





Originalfernbedienung Ersatzfernbedienung

	Tv/Radio		TV/R
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
	Audio		Dual
	Recall		Back

Originalfernbedienung Ersatzfernbedienung

