




 


 
 




 




 



 

 



 

 








 
 







 
 
 






 








Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide
	Play Mode		Shift + Play
	iPod Display(Tv Out)		Info
	iPod Menu		Menu
	iPod Play/Pause		Play

Originalfernbedienung Ersatzfernbedienung

	CD/USB Display		3D
	CD/USB Stop		Stop
	CD/USB		Pause
	Bass/Treble		Options
	Equalizer Mode		Dual
	X-Bass		Subt
	Memory		Rec
	Clear/Dimmer		Exit
	Vol+		Vol +
	Vol-		Vol -
	Clock/Timer		AV
	Sleep		Sleep
	Folder		Format
	Preset Up		Ch +
	Preset Down		Ch -
	Demo		Back
	Up/Tuning+		Up





Originalfernbedienung Ersatzfernbedienung

	Down/Tuning-		Down
	>>I		>>I
	I<<		I<<
	iPod		Red
	CD		Yellow
	Tuner(Band)		TV/R
	RDS ASPM		Smart
	USB		Green
	RDS PTY		D. Menu
	Audio In		Blue
	RDS Display		Shift + Info
	Tape		Text
	Play Tape		Right
	Stop Tape		Left
	Enter		Ok

Originalfernbedienung Ersatzfernbedienung

