



**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Tuner		Shift + 1
	CD		Shift + 2
	CDR / Tape		Shift + 3
	VCR		Shift + 4
	TV		Shift + 5
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cinema Link		Media

**Originalfernbedienung    Ersatzfernbedienung**

	DVD / 6 CH.		Pre Ch
	Menu / Guide		Menu
	Menu / Guide		Guide
	OK		Ok
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Vol +		Vol +
	Vol -		Vol -
	Mute		Mute
	Play		Play
	Stop		Stop
	I< Channel/Track		I<<
	Channel/Track >I		>>I
	Pause		Pause
	Disc / FR.D./Index		Smart





Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------

DISPLAINT-C	Text / Display / T-C	REPEAT TEXT	Text
DISPLAINT-C	Text / Display / T-C	SHIFT + DISPLAY INFO	Shift + Info
NEWS/TA	News / TA	DISPLAY INFO	Info
SURR ON/OFF	Surr On / Off	C	Yellow
SMART SOUND	Smart Sound	SOUND DUAL	Dual
LOUDNESS	Loudness	A	Red
REAR CHANNEL	Rear Channel +	+ CH	Ch +
REAR CHANNEL	Rear Channel -	- CH	Ch -
SURR MODE	Surr. Mode	D	Blue
TEST TONE	Test Tone	B	Green

Originalfernbedienung	Ersatzfernbedienung
-----------------------	---------------------






Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	TV		Blue
	Mute Tv		Mute
	1 Tv		1
	2 Tv		2
	3 Tv		3
	4 Tv		4
	5 Tv		5
	6 Tv		6
	7 Tv		7
	8 Tv		8
	9 Tv		9
	0 Tv		0
	Menu/Guide Tv		Menu
	Menu/Guide Tv		Guide
	OK Tv		Ok
	Up Tv		Up

Originalfernbedienung Ersatzfernbedienung

	Down Tv		Down
	Right Tv		Right
	Left Tv		Left
	Vol+ Tv/CD		Vol +
	Vol- Tv/CD		Vol -
	Play Tv		Play
	Stop Tv		Stop
	News/TA Tv		Info
	I< Channel/Track		I<<
	Channel/Track >I		>>I
	Power CD		Shift + Power
	CD		Yellow
	Mute CD		Shift + Mute
	1 CD		Shift + 1
	2 CD		Shift + 2
	3 CD		Shift + 3
	4 CD		Shift + 4





**Originalfernbedienung    Ersatzfernbedienung**





 
 

 
 


 
 

 

 
 

 



 


	5 CD		Shift + 5
	6 CD		Shift + 6
	7 CD		Shift + 7
	8 CD		Shift + 8
	9 CD		Shift + 9
	0 CD		Shift + 0
	Up CD		Shift + Up
	Down CD		Shift + Down
	Right CD		Shift + Right
	Left CD		Shift + Left
	News/TA CD		Shift + Info
	Stop CD		Shift + Stop
	Play CD		Pause
	I< CD		<<
	>I CD		>>
	Pause CD		Shift + Pause
	Disc / FR.D./Index CD		Smart

**Originalfernbedienung    Ersatzfernbedienung**




 
 


 



 








**Originalfernbedienung    Ersatzfernbedienung**


 




 

 
 
 


 
 

 


 





 

 
 

 

 

 
 
 
 
	Power VCR		Power
	VCR		Yellow
	Mute VCR		Mute
	1 VCR		1
	2 VCR		2
	3 VCR		3
	4 VCR		4
	5 VCR		5
	6 VCR		6
	7 VCR		7
	8 VCR		8
	9 VCR		9
	0 VCR		0
	Menu/Guide		Menu
	Up VCR		Up
	OK VCR		Ok
	Down VCR		Down

**Originalfernbedienung    Ersatzfernbedienung**

	Right VCR		Right
	Left VCR		Left
	Vol+ VCR		Vol +
	Vol- VCR		Vol -
	Play VCR		Play
	Stop VCR		Stop
	I< Channel/Track VCR		I<<
	Channel/Track >I VCR		>>I
	Pause VCR		Pause
	T·C/Index VCR		Back
	Power		Shift + Power
	CDR/Tape		Blue
	1 CDR/Tape		Shift + 1
	2 CDR/Tape		Shift + 2
	3 CDR/Tape		Shift + 3
	4 CDR/Tape		Shift + 4
	5 CDR/Tape		Shift + 5




**Originalfernbedienung Ersatzfernbedienung**

	6 CDR/Tape	 + 	Shift + 6
	7 CDR/Tape	 + 	Shift + 7
	8 CDR/Tape	 + 	Shift + 8
	9 CDR/Tape	 + 	Shift + 9
	0 CDR/Tape	 + 	Shift + 0
	Up CDR/Tape	 + 	Shift + Up
	Down CDR/Tape	 + 	Shift + Down
	Right CDR/Tape	 + 	Shift + Right
	Left CDR/Tape	 + 	Shift + Left
	News/TA		Info
	l< Channel/Track CDR/Tape		<<
	Channel/Track >l CDR/Tape		>>
	Pause	 + 	Shift + Pause
	Disc CDR/Tape		Smart

**Originalfernbedienung Ersatzfernbedienung**