



 

 





 

 






















 
 








 


 



 

 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PIP		3D
	[<>]		Format
	?		Dual
	i		Info
	Z		Menu
	TXT		Text








 

 
 


 


 

 



 







Originalfernbedienung Ersatzfernbedienung

	TV-G		Guide
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	TV		Smart
	MHP		Media
	A-B		Options
	Radio		TV/R
	Red/Picture		Red
	Green/Timer		Green


 

 




 






 

 

 







 










Originalfernbedienung Ersatzfernbedienung





 







 



 


 

 
 

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PIP		3D
	[<>]		Format
	?		Dual
	i		Info
	Z		Menu
	TXT		Text

Originalfernbedienung Ersatzfernbedienung






 








 
 




 













	TV-G		Guide
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	[^]		Smart
	Pause		Pause
	Stop		Stop
	Play		Play
	I<		I<<
	>I		>>I




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PIP		3D
	[<>]		Format
	?		Dual
	i		Info
	Z		Menu
	TXT		Text

Originalfernbedienung Ersatzfernbedienung

	TV-G		Guide
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	[^]		Smart
	Pause		Pause
	Stop		Stop
	Play		Play
	I<		I<<
	>I		>>I



