


















 

 









Originalfernbedienung Ersatzfernbedienung

Power		Power
Muting		Mute / Dimmer
Mode-		CH- / Page-
Mode+		CH+ / Page+
Vol Rs-/Effect		Play / Slow
Tape 2 Pre./eq		Pause / Step / Freeze
Sleep		Sleep / Timer
Enter		OK
Left		Left
MULTI CH / 2CH DIRECT		Audio / Lang I/II
Source		AV / Input / RDS
A.F.D.		Sound / Title
Volume+		Vol+
Main Menu		Menu / Home
Right		Right
Volume-		Vol-
EQ		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung










 
 
 
 
Tape 1 Hall/Ats		Stop / Hold
Display		Display / Media
TV / SAT		Shift + 1
Repeat		Green / APP / Repeat
TAPE		Shift + 5
TV Prog+		Shift + CH+ /
Up / EQ+		Up
Program		TV/Radio /
Dimmer		Shift + Mute / Dimmer
Down / EQ-		Down
Test Tone		Text / Goto
Tuner		Shift + 6
TV Prog-		Shift + CH- /
Pr 1		1
Pr 2		2
Pr 3		3
Pr 4		4













Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Pr 6	 6	2CH / Off	 +  Shift + Audio / Lang I/II
Pr 5	 5		
Pr 7	 7		
Pr 8	 8		
Pr 9	 9		
D.Tuning	 Smart / List		
D.Skip/CH/Preset -	 I<< / Preset-		
D.Skip/CH/Preset	 >>I / Preset+		
MD/TAPE	 +  Shift + 7		
Power TV	 +  Shift + Power		
Phono	 +  Shift + 0		
DVD/LD	 +  Shift + 2		
CD/SACD	 +  Shift + 3		
Pr 0/10	 0		
VIDEO 1	 +  Shift + 4		
VIDEO 2	 +  Shift + 8		
VIDEO 3	 +  Shift + 9		









 

Originalfernbedienung Ersatzfernbedienung

Mute		Mute / Dimmer
Power ON/Off		Power
Every Pop		Picture / Format
Sleep		Sleep / Timer
Tape 1 Preset		Down
Vol Rs-/Effect		CH- / Page-
Repeat		Green / APP / Repeat
Tape 2 Pre./eq		Subtitle / EQ
Vol Rs+/S.Mode		CH+ / Page+
Display		Display / Media
Stop		Stop / Hold
Woofer/Speed		Menu / Home
Tape 1 Stop		OK
Volume+		Vol+
Volume-		Vol-
CD/Theater		Audio / Lang I/II
Dimmer	 + 	Shift + Mute / Dimmer

Originalfernbedienung Ersatzfernbedienung

ON/Off	 + 	Shift + Power
Program		TV/Radio /
CD Random		Blue / Prime Video / Random
Funct./Direct		D.Menu / Top
Pr 1		1
Pr 2		2
Pr 3		3
CD Play		Play / Slow
Tape 1 Hall/Ats		Up
Pr 4		4
Pr 5		5
Next/Prog+		>>I / Preset+
Pr 6		6
Pr 7		7
CD Rewind		<< / Tune-
Pr 8		8
Pr 9		9



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Prev./Prog-	  << / Preset-	Tape 1 F.FWD	 Right
CD F.FWD	 >> / Tune+		
Pr 0/10	 0		
CD Pause	 Pause / Step / Freeze		
Phono/Scan	 Guide / EPG / -/--		
Mode	 Smart / List		
6 Ch/Geq	 +  Shift + 6		
Ubs/Check	 +  Shift + 8		
Tuner/Bypass	 Fav / Marker / PC		
Band	 +  Shift + 9		
Aux/Video	 +  Shift + 7		
Disc 1 Eject	 +  Shift + 1		
Disc 2	 +  Shift + 2		
Disc 3 Eject	 +  Shift + 3		
Disc 5	 +  Shift + 5		
Fm Mode/Disc	 Sound / Title		
Tape 1 Rew	 Left		

