




 

 


 




 

 




 

 

 






 

 
 
 
 
 

 
 
 







**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	SD		Smart
	[ + ]		Info
	Tv/AV		AV
	Menu		Menu
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Tv/Text		Text
	F.P.		Eject

**Originalfernbedienung Ersatzfernbedienung**

	Index		List
	Hold		Options
	N		Media
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9







