
















 



 

 

 

 














 
 
 
 
 
 
 






Originalfernbedienung Ersatzfernbedienung

	On/Standby		Power
	Vol+		Vol +
	Vol-		Vol -
	X-Bass/Equalizer		Smart
	Video/AUX		Red
	Tape (1↔2)		Blue
	Tuner(Band)		Green
	CD		Yellow
	Rec/Pause Tape 2		Rec
	<< Tape 2		<<
	>> Tape 2		>>
	Play Tape 2		Left
	Play Tape 1		Right
	Stop Tape		Ok
	Tuner Preset Up		Ch +
	Tuner Preset		Ch -
	PTY TI		Back

Originalfernbedienung Ersatzfernbedienung

	Disc CD 1		1
	Disc CD 2		2
	Disc CD 3		3
	Disc Skip		Media
	I<</<< CD		I<<
	>>/>>I CD		>>I
	Stop CD		Stop
	Play CD		Play
	Memory CD		3D
	Clear		Exit
	Random		TV/R
	Pause CD		Pause

