



 
 

 
 
 




 
 
 
 
 
 

 



 


 
 
 


 






 
 
 
 
 

 
 

 
 




 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mode/Auto		Smart
	Options		Options
	FAV		Shift + Pre Ch
	Sleep		Sleep
	Red/Demo		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Menu		Menu
	Exit		Exit
	Source		AV
	Net TV		Media
	Back		Back
	Info		Info
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	OK		Ok
	<<		<<
	Play		Play
	Pause		Pause
	>>		>>
	Stop		Stop
	Rec		Rec
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Format		Format
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2





Originalfernbedienung Ersatzfernbedienung

3 DEF	3	3	3
4 GHI	4	4	4
5 JKL	5	5	5
6 MNO	6	6	6
7 PQRS	7	7	7
8 TUV	8	8	8
9 WXYZ	9	9	9
0 . @	0	0	0
PREV. CH	Prev. CH	FAV PRE-CH	Pre Ch
.	.	AD SUBT	Subt

Originalfernbedienung Ersatzfernbedienung

