 


 



 
 
 







 
 









 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Audio		Dual
	[+]		Format
	Digital		Media
	Analog		Smart
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[≡]		Text
	Recall		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	[i+]		Info
	Menu/Home		Menu
	Return/Exit		Exit
	Return/Exit		Back
	CH+		Ch +
	CH-		Ch -
	Tools/Options		Options
	[:≡]		Guide







 


 
 

















 
 








Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Top Menu		D. Menu
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Pre Ch
	F1		Smart
	F2		Media

 

Originalfernbedienung Ersatzfernbedienung

	[:=]		Guide
	Display		Info
	Tools/Options		Options
	Return/Exit		Back
	Menu/Home		TV/R
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause





Originalfernbedienung Ersatzfernbedienung


 


 

	Stop		Stop
	<<		<<
	>>		>>
	←		Ch -
	→		Ch +

Originalfernbedienung Ersatzfernbedienung


 
 
 

 


 


 
 








 
 









Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Menu		Menu
	Top Menu		D. Menu
	F1		Smart
	F2		Media
	[:=]		Guide
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Clear		Exit
	Display		Info
	Tools/Options		Options
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Return/Exit		Back
	Menu/Home		TV/R
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Play		Play
	Pause		Pause
	Stop		Stop
	>>		>>





Originalfernbedienung Ersatzfernbedienung

TUNING --	<<	⏪	<<
TV CH + PRESET +	>>	⏩	>>
TV CH - PRESET -	<<	⏪	<<
↶	↑	CH -	Ch -
↷	↓	CH +	Ch +

Originalfernbedienung Ersatzfernbedienung




 










Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Pre Ch
	Theatre		Smart
	Sound Field		Dual
	AMP Menu		Menu

Originalfernbedienung Ersatzfernbedienung

	Display		Info
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	Menu/Home		Media
	Return/Exit		Back
	Up		Up
	OK		Ok
	Down		Down
	Right		Right
	Left		Left
	Play		Play
	Stop		Stop
	Pause		Pause
	>>/Tuning+		>>
	<</Tuning-		<<
	>>I/Preset+		>>I





Originalfernbedienung Ersatzfernbedienung

	I<</Preset-		I<<
	→		Ch +
	←		Ch -
	DMPort		Options
	Video		Shift + 1
	BD		Shift + 3
	DVD		Shift + 4
	SAT		Shift + 5
	TV		Shift + 6
	Tuner/Band		Shift + 8

Originalfernbedienung Ersatzfernbedienung

