


 













 
 
 
 
 
 
 
 



 

 
 
 





Originalfernbedienung Ersatzfernbedienung

	Timer		AV
	Sleep		Sleep
	Clock		Options
	Edit/Check		Info
	PRGM		Shift + Sleep
	Random		TV/R
	Repeat/Mono		Text
	Open/Close		Eject
	1		1
	Disc Direct Play 1		Shift + 1
	2		2
	Disc Direct Play 2		Shift + 2
	3		3
	Disc Direct Play 3		Shift + 3
	4		4
	Disc Direct Play 4		Shift + 4
	5		5

Originalfernbedienung Ersatzfernbedienung

	Disc Direct Play 5		Shift + 5
	6		6
	Disc Direct Play 6		Shift + 6
	7		7
	Disc Direct Play 7		Shift + 7
	8		8
	9		9
	0		0
	+10		Guide
	Karaoke Enter		Ok
	Karaoke		Media
	T.Bass		Dual
	GEQ		Smart
	CD		Yellow
	Video/AUX		Red
	Tuner/Band		Green
	Tape Deck 1/2		Blue





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Play/Direction/Pre set <>	 Play		
 Tuning Down / << / I<<	 <<		
 Tuning Down / << / I<<	 I<<		
 Tuning Up / >> / >>I	 >>		
 Tuning Up / >> / >>I	 >>I		
 Stop / Clear	 Stop		
 Stop / Clear	 Exit		
 Rec/Rec Mute	 Rec		
 Pause	 Pause		
 Set	 Menu		
 Power	 Power		
 Volume Down	 Vol -		
 Volume Up	 Vol +		

