 



 
 
 







**Originalfernbedienung Ersatzfernbedienung**

	Standby		Power
	Mute		Mute
	P/N		Smart
	Open/Close		Eject
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Setup		Options
	Source		AV
	Info		Info
	Return/Exit		Back
	CH+		Ch +
	CH-		Ch -

**Originalfernbedienung Ersatzfernbedienung**

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0



