

 
 
 




**Originalfernbedienung    Ersatzfernbedienung**

	POWER		Power
	INPUT		AV
	MENU		Menu
	ESC		Exit
	ZOOM-		Ch -
	ZOOM+		Ch +
	FOCUS-		Shift + Down
	FOCUS+		Shift + Up
	UP		Up
	LEFT		Left
	ENTER		Ok
	RIGHT		Right
	DOWN		Down
	KEYSTONE+		Shift + Right
	KEYSTONE-		Shift + Left
	DZOOM+		Shift + Ch +
	DZOOM-		Shift + Ch -

**Originalfernbedienung    Ersatzfernbedienung**

	VOL+		Vol +
	VOL-		Vol -
	TIMER		Shift + AV
	TIMER		Sleep
	AUTO		Media
	BLANK		Back
	FREEZE		Stop
	ECO		3D
	ASPECT		Format
	FUNC		Smart
	<<		<<
	Play / Pause		Play
	Play / Pause		Pause
	>>		>>
	I<		I<<
	>I		>>I

