

 




 

 

 

 



 



 

 
 
 
 
 





 
 








 

 

 

 



 

 
 
 
 


 

 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Home		Smart
	>>I		>>I
	I<<		I<<
	>>		>>
	<<		<<
	Play		Play
	Pause		Pause
	Rec		Rec
	Stop		Stop
	EPG		Guide
	SAT		Options
	TXT		Text
	Find		Media
	Menu		Menu
	i		Info
	FAV		Pre Ch
















 







 


Originalfernbedienung Ersatzfernbedienung

	Exit		Exit
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Shift		AV
	USB		3D





Originalfernbedienung Ersatzfernbedienung

Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Tv/Radio	 TV/R		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0		
 Audio	 Dual		
 Recall	 Back		

Originalfernbedienung Ersatzfernbedienung