 


 






 

 






 
 
 

 




 





 
 
 
 
 

 
 
 
 
 


 
 

 
 
 
 
 
 
 



 

 

 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	DVD		Guide
	VCR		Pre Ch
	Eject/Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Av Input		AV
	<</Backward		<<

 
 








 







 


 
 




 



 

 





Originalfernbedienung Ersatzfernbedienung

	>>/Forward		>>
	I<< Skip		I<<
	>>I Skip		>>I
	Pause/Step		Pause
	Play		Play
	Stop		Stop
	Rec		Rec
	Home		Smart
	Disc Menu List		Menu
	Display		Info
	Return		Back
	PR/CH Up/TRK+		Up
	PR/CH		Down
	Right		Right
	Left		Left
	Enter		Ok
	O))/Audio		Dual







Originalfernbedienung Ersatzfernbedienung

	[...]/Subtitle		Subt
	Zoom	 + 	Shift + Eject
	I.Skip		Text
	Rec Mode	 + 	Shift + Rec
	Dubbing		Format
	Title		Options
	Marker		3D
	Play Mode	 + 	Shift + Play
	Thumbnail		Sleep
	CHP.ADD		List
	- Search	 + 	Shift + TV/R
	Tv/VCR		TV/R
	Power Tv	 + 	Shift + Power
	AV Input Tv		Media
	PR/CH + Tv		Ch +
	PR/CH - Tv		Ch -
	Vol+ Tv		Vol +

Originalfernbedienung Ersatzfernbedienung

	Vol- Tv		Vol -

