



Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open/Close		Eject
	Dimmer		Smart
	Vol+		Vol +
	Vol-		Vol -
	SlowF/+		Ch +
	SlowR/-		Ch -
	Zoom		Shift + Eject
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8

Originalfernbedienung Ersatzfernbedienung

	9		9
	0		0
	<</F.RWD		<<
	F.FWD/>>		>>
	I<</Skip-		I<<
	Skip+/>>I		>>I
	Pause/step		Pause
	Play		Play
	Stop		Stop
	Return		Back
	Display		Info
	Video.Out		AV
	Audio		Dual
	Subtitle		Subt
	Angle		Red
	Search		TV/R
	Setup		Options





Originalfernbedienung Ersatzfernbedienung

	Menu		Menu
	PRG		Sleep
	CLR		Exit
	Title		Guide
	Repeat		Text
	Mode		Format
	A-B	+	Shift + Text
	Mark		Yellow
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left

Originalfernbedienung Ersatzfernbedienung

