



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Info		Info
	Back		Back
	Menu		Menu
	Exit		Exit
	Up		Up

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	EPG		Guide
	TV/Radio		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	Fav		Pre Ch
	Stop		Stop
	Media		Media
	I<<		I<<
	>>I		>>I
	>>		>>





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	Play		Play
	Pause		Pause
	TTX		Text
	Audio		Dual
	Subtitle		Subt
	USB		Smart
	Timer		AV

Originalfernbedienung Ersatzfernbedienung


