
 

 



 

















 












Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------|---|--|
|  | PLII PARA. |  | D. Menu |
|  | Adjust - |  | +  Shift + Down |
|  | DSP - |  | +  Shift + Left |
|  | Power |  | Power |
|  | CH/Level Up |  | Ch + |
|  | CH/Level Down |  | Ch - |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Mute |  | Mute |
|  | Up / PTY Select |  | Up |
|  | Down / Search M. |  | Down |
|  | Right / EON PTY |  | Right |
|  | Left / EON TA |  | Left |
|  | Enter / RDS |  | Ok |
|  | Setup / OSD |  | Options |
|  | Menu / T.Tone |  | Menu |
|  | Display / Sleep |  | Info |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------|---|-------|
|  | Display / Sleep |  | Sleep |
|  | Return / |  | Back |
|  | Stop / P.Scan |  | Stop |
|  | << / Tune - |  | << |
|  | >> / Tune + |  | >> |
|  | I<< / Preset - |  | I<< |
|  | >>I / Preset + |  | >>I |
|  | 1 / Tuner |  | 1 |
|  | 2 / CD |  | 2 |
|  | 3 / AUX |  | 3 |
|  | 4 / Tape |  | 4 |
|  | 5 |  | 5 |
|  | 6 / Video 1 |  | 6 |
|  | 7 / Video 2 |  | 7 |
|  | 8 / Video 3 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|----------------|
|  | Adjust + |  | Shift + Up |
|  | 7CH Dir |  | 3D |
|  | CH Sel / T/V |  | TV/R |
|  | SPK SET |  | Exit |
|  | Auto |  | Subt |
|  | DSP + |  | Shift + Right |
|  | Stereo |  | Dual |
|  | CD |  | Green |
|  | AUDIO |  | Red |
|  | AUX |  | Yellow |
|  | TV |  | Blue |
|  | VCR |  | Shift + Red |
|  | SAT |  | Shift + Blue |
|  | CABLE |  | Shift + Yellow |
|  | DVD |  | Shift + Green |
|  | AUX Power / |  | Shift + Power |
|  | AUX Rec |  | Shift + Rec |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------------|---|---------------|
|  | AUX Pause |  | Shift + Pause |
|  | AUX Play |  | Shift + Play |
|  | AUX Stop / P.Scan |  | Shift + Stop |
|  | AUX << / Tune |  | Shift + << |
|  | AUX >> / Tune |  | Shift + >> |
|  | AUX >> / Preset |  | Shift + >> |
|  | AUX << / Preset - |  | Shift + << |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|------------|------------------|-----------|----------------|
| AUDIO | AUDIO | A | Red |
| CD | CD | B | Green |
| AUX | AUX | C | Yellow |
| TV | TV | D | Blue |
| VCR | VCR | SHIFT + A | Shift + Red |
| DVD | DVD | SHIFT + B | Shift + Green |
| CABLE | CABLE | SHIFT + C | Shift + Yellow |
| SAT | SAT | SHIFT + D | Shift + Blue |
| POWER | TV Power | Power | Power |
| CH/LEVEL + | TV CH/Level + | CH + | Ch + |
| CH/LEVEL - | TV CH/Level - | CH - | Ch - |
| CH SEL | TV CH Sel. / T/V | MEDIA | Media |
| MUTE | TV Mute | MUTE | Mute |
| VOLUME + | TV Volume + | VOL + | Vol + |
| VOLUME - | TV Volume - | VOL - | Vol - |
| TUNER 1 | TV 1 | 1 | 1 |
| CD 2 | TV 2 | 2 | 2 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|------------|------------------|--------------------|---------------|
| AUX 3 | TV 3 | 3 | 3 |
| TAPE 4 | TV 4 | 4 | 4 |
| AUX 5 | TV 5 | 5 | 5 |
| VIDEO1 6 | TV 6 | 6 | 6 |
| VIDEO2 7 | TV 7 | 7 | 7 |
| VIDEO3 8 | TV 8 | 8 | 8 |
| 9 | TV 9 | 9 | 9 |
| 0 | TV 0 | 0 | 0 |
| POWER | CABLE Power | SHIFT + Power | Shift + Power |
| CH/LEVEL + | CABLE CH/Level + | SHIFT + CH + | Shift + Ch + |
| CH/LEVEL - | CABLE CH/Level - | SHIFT + CH - | Shift + Ch - |
| CH SEL | CABLE CH Sel. | SHIFT + HOME SMART | Shift + Smart |
| MUTE | CABLE Mute | SHIFT + MUTE | Shift + Mute |
| VOLUME + | CABLE Volume + | SHIFT + VOL + | Shift + Vol + |
| VOLUME - | CABLE Volume - | SHIFT + VOL - | Shift + Vol - |
| TUNER 1 | CABLE 1 | SHIFT + 1 | Shift + 1 |
| CD 2 | CABLE 2 | SHIFT + 2 | Shift + 2 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------|---------|-----------|-----------|
| AUX 3 | CABLE 3 | SHIFT + 3 | Shift + 3 |
| TAPE 4 | CABLE 4 | SHIFT + 4 | Shift + 4 |
| 5 | CABLE 5 | SHIFT + 5 | Shift + 5 |
| VIDEO1 6 | CABLE 6 | SHIFT + 6 | Shift + 6 |
| VIDEO2 7 | CABLE 7 | SHIFT + 7 | Shift + 7 |
| VIDEO3 8 | CABLE 8 | SHIFT + 8 | Shift + 8 |
| 9 | CABLE 9 | SHIFT + 9 | Shift + 9 |
| 0 | CABLE 0 | SHIFT + 0 | Shift + 0 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|--|--|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|----------------|
|  | AUDIO |  | Red |
|  | CD |  | Green |
|  | AUX |  | Yellow |
|  | TV |  | Blue |
|  | VCR |  | Shift + Red |
|  | DVD |  | Shift + Green |
|  | SAT |  | Shift + Blue |
|  | CABLE |  | Shift + Yellow |
|  | DVD Power |  | Power |
|  | DVD Menu / |  | Menu |
|  | DVD Audio Sel. |  | Dual |
|  | DVD Subtitle |  | Subt |
|  | DVD Zoom |  | 3D |
|  | DVD OSD |  | Format |
|  | DVD Up |  | Up |
|  | DVD Left |  | Left |
|  | DVD Enter |  | Ok |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------------|---|-------|
|  | DVD Right |  | Right |
|  | DVD Down |  | Down |
|  | DVD Display |  | Info |
|  | DVD Pause |  | Pause |
|  | DVD Play |  | Play |
|  | DVD Stop / P.Scan |  | Stop |
|  | DVD << |  | << |
|  | DVD >> |  | >> |
|  | DVD I<< |  | I<< |
|  | DVD >>I |  | >>I |
|  | DVD 1 |  | 1 |
|  | DVD 2 |  | 2 |
|  | DVD 3 |  | 3 |
|  | DVD 4 |  | 4 |
|  | DVD 5 |  | 5 |
|  | DVD 6 |  | 6 |
|  | DVD 7 |  | 7 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|------------------|----------------|---|---------------|
| VIDEO3 8 | DVD 8 | 8 | 8 |
| 9 | DVD 9 | 9 | 9 |
| 0 | DVD 0 | 0 | 0 |
| POWER 8 | SAT Power | SHIFT + POWER | Shift + Power |
| CH/LEVEL UP | SAT CH/Level + | SHIFT + + CH | Shift + Ch + |
| CH/LEVEL DOWN | SAT CH/Level - | SHIFT + - CH | Shift + Ch - |
| CH SEL T/V | SAT CH Sel. | SHIFT + APP MEDIA | Shift + Media |
| MUTE MUTE | SAT Mute | SHIFT + MUTE | Shift + Mute |
| VOLUME UP | SAT Volume + | SHIFT + + VOL | Shift + Vol + |
| VOLUME DOWN | SAT Volume - | SHIFT + - VOL | Shift + Vol - |
| TUNER 1 | SAT 1 | SHIFT + 1 | Shift + 1 |
| CD 2 | SAT 2 | SHIFT + 2 | Shift + 2 |
| AUX 3 | SAT 3 | SHIFT + 3 | Shift + 3 |
| TAPE 4 | SAT 4 | SHIFT + 4 | Shift + 4 |
| 5 | SAT 5 | SHIFT + 5 | Shift + 5 |
| VIDEO1 6 | SAT 6 | SHIFT + 6 | Shift + 6 |
| VIDEO2 7 | SAT 7 | SHIFT + 7 | Shift + 7 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|-------------|-------|-------------------------|-----------|
| VIDEO3 8 | SAT 8 | SHIFT + 8 | Shift + 8 |
| 9 | SAT 9 | SHIFT + 9 | Shift + 9 |
| 0 | SAT 0 | SHIFT + 0 | Shift + 0 |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------|---|----------------|
|  | AUDIO |  | Red |
|  | CD |  | Green |
|  | AUX |  | Yellow |
|  | TV |  | Blue |
|  | VCR |  | Shift + Red |
|  | SAT |  | Shift + Blue |
|  | CABLE |  | Shift + Yellow |
|  | DVD |  | Shift + Green |
|  | CD Pause |  | Pause |
|  | CD Play |  | Play |
|  | CD Stop |  | Stop |
|  | CD I<< |  | I<< |
|  | CD >>I |  | >>I |
|  | CD 1 |  | 1 |
|  | CD 2 |  | 2 |
|  | CD 3 |  | 3 |
|  | CD 4 |  | 4 |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|--------------|---|---------------|
|  | CD 5 |  | 5 |
|  | CD 6 |  | 6 |
|  | CD 7 |  | 7 |
|  | CD 8 |  | 8 |
|  | CD 9 |  | 9 |
|  | CD 0 |  | 0 |
|  | VCR Power |  | Shift + Power |
|  | VCR CH Sel. |  | Shift + Media |
|  | VCR Rec |  | Shift + Rec |
|  | VCR Play |  | Shift + Play |
|  | VCR Mute |  | Shift + Mute |
|  | VCR >> |  | Shift + >> |
|  | VCR << |  | Shift + << |
|  | VCR Volume - |  | Shift + Vol - |
|  | VCR Volume + |  | Shift + Vol + |
|  | VCR CH+ |  | Shift + Ch + |
|  | VCR CH- |  | Shift + Ch - |





Originalfernbedienung Ersatzfernbedienung

| | | | |
|--|-----------|---|---------------|
| | VCR Pause | + | Shift + Pause |
| | VCR Stop | + | Shift + Stop |
| | VCR 1 | + | Shift + 1 |
| | VCR 2 | + | Shift + 2 |
| | VCR 3 | + | Shift + 3 |
| | VCR 4 | + | Shift + 4 |
| | VCR 5 | + | Shift + 5 |
| | VCR 6 | + | Shift + 6 |
| | VCR 7 | + | Shift + 7 |
| | VCR 8 | + | Shift + 8 |
| | VCR 9 | + | Shift + 9 |
| | VCR 0 | + | Shift + 0 |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

Originalfernbedienung Ersatzfernbedienung

| | |
|--|--|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

