 

 
 
 
 
 
 
 
 
 
 
 
 
 

 

 
 
 
 
 

 









 
 
 

 
 
 

 

 

 

 


 

 
 
 

 

 
 

 

 
 

 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Mute		Mute
	Guide/Top		Media
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[<>]		Format
	<[/]>		3D
	Subtitle		Subt


 




 
 


 


 



 
 


 
 
 
 
 
 


 



 


 

 



 
 
 
 
 
 
 



 





 



 




 




	Original	Replacement		Original	Replacement
	Text	 Text			
	II/II>/[▼]	 Pause			
	[i+]/[≡i]	 Info			
	O)I/II	 Dual			
	Stop	 Stop			
	Play/[≡o]	 Play			
	Eject	 Eject			
	I<</[≡?]	 I<<			
	<</[≡+]	 <<			
	>>/[≡♦]	 >>			
	>>I/[O]/[≡X]	 >>I			
	AD	 Shift + Subt			
	Audio	 Shift + Dual			

 
 




Original		Replacement		Original		Replacement	
	←[/]→		3D		Menu/DVD		Menu
	Power		Power		Tv/FAV/Radio/Set		TV/R
	1		1		Guide/Top		Guide
	2		2		[<>]		Format
	3		3		Text		Text
	4		4		Subtitle		Subt
	5		5		O) /II		Dual
	6		6		[i+]/[≡i]		Info
	7		7		OK		Ok
	8		8		Up		Up
	9		9		Down		Down
	0		0		Right		Right
	Source		AV		Left		Left
	Mute		Mute		/II>/[▼]		Pause
	Vol+		Vol +		Play/[≡o]		Play
	Vol-		Vol -		Stop		Stop
	Exit/Return		Exit		Eject		Eject





 








 
 

 



 



 

 

 
 
 








 









 
Original	Replacement
 <</[≡?]	 <<
 <</[≡+]	 <<
 >>/[≡◇]	 >>
 >> /[O]/[≡X]	 >>
 Audio	 +  Shift + Dual

Original	Replacement





Original	Replacement	Original	Replacement
	Power		Power
	←[/]→		3D
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +

Original	Replacement	Original	Replacement
	P-		Ch -
	Mute		Mute
	Guide/Top		Guide
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Text		Text
	[<>]		Format





Original	Replacement
[i+]/[≐i]	DISPLAY INFO Info
II/II>/[▼]	II Pause
Subtitle	AD SUBT Subt
O)I/II	SOUND DUAL Dual
Play/[≐o]	PLAY MODE ▶ Play
Stop	◻ Stop
Eject	ZOOM ▲ Eject
I<</[≐?]	I<< I<<
<</[≐+]	<< <<
>>/[≐◇]	>> >>
>>I/[O]/[≐X]	>>I >>I
Audio	SHIFT + SOUND DUAL Shift + Dual
AD	SHIFT + AD SUBT Shift + Subt

Original	Replacement

