



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<<	 <<< / Tune-
 >>>	 >>> / Tune+
 Lang	 Audio / Lang I/II
 Source (Games)	 Eject / Surround
 Movie-Music-Phot	 Picture / Format
 [≡]..	 Zoom / Size
 */O	 Sleep / Timer
 TV	 TV/Radio /
 Q.Menu	 D.Menu / Top
 [-O-]	 Setup / OPT /
 [≡]/Text	 Text / Goto

Original	Replacement
 Menu	 Menu / Home
 Up	 Up
 i	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 EXIT	 Exit / Cancel / Clear
 Down	 Down
 BACK	 Back / Return
 + v	 + VOL
 World (Violet)	 LIST SMART
 + P	 + CH PAGE
 v -	 VOL -
 ★/Q	 MEDIA DISPLAY
 P -	 CH PAGE -
 1./@	 TV 1
 2 abc	 DVD 2





	Original	Replacement	Original	Replacement
	3	3		
	4	4		
	5	5		
	6	6		
	7	7		
	8	8		
	9	9		
	Guide	Guide / EPG / -/--		
	0	0		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue	Blue / Prime Video / Random		
	Recall	+ Shift + Back / Return		

