







 







 



 



 







 



 

 

 







 



 















 
 



 

 


 
 



 
 




Original	Replacement	Original	Replacement
	Power		Power
	Source		AV / Input / RDS
	TV		Shift + 1
	[<>]		Picture / Format
	3D		Shift + 3
	O/I/II		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Fav / Marker / PC
	[i+]		Info / Angle
	AD		Sound / Title
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	P-		CH- / Page-
	Text		Text / Goto
	Quick		Display / Media
	List		Smart / List
	Menu		Menu / Home
	Guide		Guide / EPG / -/-
	[.]		D.Menu / Top
	[>]		Setup / OPT /
	Exit		Exit / Cancel / Clear
	Up		Up





Original	Replacement
	Down
	Right
	Left
	Back / Return
	OK
	Shift + Right
	Play / Slow
	Shift + Left
	Stop / Hold
	Pause / Step / Freeze
	Shift + Up
	Shift + Down
	Rec / Rec Mode
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	<< / Tune-

Original	Replacement
	Blue / Prime Video / Random
	>> / Tune+
	I<< / Preset-
	>>I / Preset+
	TV/Radio /
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

