


 
 

 

 

 


 



 
 
 














 


 
 

 



 



 






Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PIP/Audio		3D
	[<>]		Format
	?		Smart
	Mute		Mute
	Z/Disc Menu		Menu
	i/OSD		Info
	TXT		Text
	TV-G		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Image/I>		Red
	Green/Timer		Green
	Yellow/@		Yellow
	Blue/Sound		Blue
	Play		Play
	Pause		Pause

 

 

 
 

 
 




 
 


 





Original	Replacement	Original	Replacement
 Stop	 Stop		
 <<	 <<		
 >>	 >>		
 I<	 I<<		
 >I	 >>I		

 
 

 



 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PIP/Audio		3D
	[<>]		Format
	?		Smart
	i/OSD		Info
	TXT		Text
	TV-G		Guide
	Z/Disc Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Image/I>		Red
	Green/Timer		Green
	Yellow/@		Yellow
	Blue/Sound		Blue
	Play		Play
	Pause		Pause
	Stop		Stop




 

 

 





 

 

 
 


 


 
 
 
 






 








 

 

 






	Original	Replacement		Original	Replacement
	<<		<<		
	>>		>>		
	>		>>		
	<		KK	<<	














Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PIP/Audio		3D
	[<>]		Format
	?		Smart
	Mute		Mute
	i/OSD		Info
	TXT		Text
	Z/Disc Menu		Menu
	TV-G		Guide
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Image/I>		Red
	Green/Timer		Green
	Yellow/@		Yellow
	Blue/Sound		Blue
	Play		Play
	Pause		Pause

 





	Original	Replacement	Original	Replacement
	Stop			
	<<			
	>>			
	I<			
	>I			






 






Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	PIP/Audio		3D
	[<>]		Format
	?		Smart
	i/OSD		Info
	TXT		Text
	TV-G		Guide
	Z/Disc Menu		Menu
	P+		Ch +
	P-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Red/Image/I>		Red
	Green/Timer		Green
	Yellow/@		Yellow
	Blue/Sound		Blue
	Play		Play
	Pause		Pause
	Stop		Stop





	Original	Replacement	Original	Replacement
	<<		<<	
	>>		>>	
	<		<<	
	>		>>	

