 
 




 
 
 






 


 



 
 
 

 
 
 
 
 
 
 



 
 
 


Original	Replacement	Original	Replacement
	Power		Power
	E-Manual		D. Menu
	Ratio		Format
	Input		AV
	TV / RAD		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Q.View		Pre Ch
	Vol +		Vol +
	Vol -		Vol -
	FAV		Shift + Pre Ch
	3D		3D
	Mute		Mute
	P +		Ch +
	P -		Ch -
	Info		Info
	SMART		Smart
	My APPS		Media
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Back		Back
	Guide		Guide





Original	Replacement
 Exit	 Exit
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 T.OPT	 Options
 Q.Menu	 Menu
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 <<<	 <<<
 <<<	 I<<<
 >>>	 >>>
 >>>	 >>I
 REC	 Rec
 Settings	 Shift + Options

Original	Replacement
 AD	 Subt
 APP/*	 Shift + Media

