 

 



 



 

 

 

 

 





 



 













 

 



 

 



 



 

 

 









Original	Replacement
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 O)/I-II/Audio	 Audio / Lang I/II
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear

Original	Replacement
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 CH+	 CH+ / Page+
 Index	 Display / Media
 Vol+	 Vol+
 CH-	 CH- / Page-
 List	 Smart / List
 Vol-	 Vol-
 Fav / Marker / PC	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 EPG	 Guide / EPG / -/-
 Recall	 Back / Return
 Red	 Red / Netflix / Search
 <<	 << / Tune-





Original	Replacement	Original	Replacement
 Green	 Green / APP / Repeat		
 >>	 >> / Tune+		
 Yellow	 Yellow / YouTube / Repeat		
 I<<	 I<< / Preset-		
 Blue	 Blue / Prime Video / Random		
 >>	 >> / Preset+		
 [=]	 Text / Goto		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 [=+]	 Shift + Stop /		
 Stop/Still	 Stop / Hold		
 Radio	 TV/Radio /		
 [=◇]/[++]	 Zoom / Size		
 [=x]	 D.Menu / Top		
 [=o]/Subtitle	 Subtitle / EQ		
 DMP	 Setup / OPT /		
 Rec	 Rec / Rec Mode		

