




 




 
 

 





 
 
 



















Original	Replacement	Original	Replacement
	Power		Mute
	Source		Mute
	HDMI		AV
	1		D. Menu
	2		Ch +
	3		Ch -
	4		CH List
	5		Menu
	6		Guide
	7		Smart Hub
	8		Tools
	9		Info
	0		Back/Return
	TTX/MIX		Exit
	PRE-CH		Up
	Vol+		Down
	Vol-		Right
			Left
			Ok
			Red





Original	Replacement	Original	Replacement
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Family Story	 Media		
 Search	 TV/R		
 P.Size	 Format		
 Support	 Eject		
 D	 3D		
 AD/Subt.	 Subt		
 <<<	 <<<		
 I<<<	 I<<<		
 Pause	 Pause		
 >>>	 >>>		
 >>>I	 >>>I		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

