













 








 


 




 



 






 

 
 

 

 





 






 





Original	Replacement
 Standby	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 SHIFT +  Shift + Guide
 Recall	 RETURN BACK Back
 Vol+	 + VOL Vol +
 Vol-	 VOL - Vol -
 Nicam	 HOME SMART Smart

Original	Replacement
 Auto	 APP MEDIA Media
 Display	 DISPLAY INFO Info
 CH+	 + CH Ch +
 CH-	 CH - Ch -
 LCD Menu	 TOP MENU MENU Menu
 Exit	 CLEAR EXIT Exit
 Up	 Up Up
 Down	 Down Down
 Right	 Right Right
 Left	 Left Left
 Enter	 OK Ok
 Input	 TIMER AV AV
 P.Mode	 SHIFT +  PICTURE FORMAT Shift + Format
 S.Mode	 SHIFT +  SOUND DUAL Shift + Dual
 Sleep	 PROG SLEEP Sleep
 Aspect	 ECO 3D 3D
 FAV	 FAV PRE-CH Pre Ch





Original	Replacement
 FAV-	 Shift + Ch -
 FAV+	 Shift + Ch +
 TEXT	 Text
 Hold	 Options
 Lang	 Dual
 EPG	 Guide
 Index	 List
 Size	 Format
 Reveal	 Subt
 Subpage	 TV/R
 Red/Tv/Radio	 Red
 Green/Audio	 Green
 Yellow/Freeze	 Yellow
 Blue/Subtitle	 Blue

Original	Replacement

