



 

















Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide
Return	Back
TV/AV	AV
Timer	Shift + AV
Picture	Format
Sound	Dual

Original	Replacement
Vol+	Vol +
Vol-	Vol -
Mute	Mute
UP/CH+	Up
Down/CH-	Down
Right	Right
Left	Left
OK	Ok
Sys Menu	Menu
Display	Shift + Info
TV/TXT/Hold	Media
Cancel/Size	3D
Reveal	Eject
Nicam/A2	Options
Prog+	Ch +
Prog-	Ch -
Subpage	List





	Original	Replacement	Original	Replacement
	Index	 Smart		
	DVB Menu	 D. Menu		
	Tv/Radio	 TV/R		
	Exit	 Exit		
	Info	 Info		
	Subtitle	 Subt		
	FAV	 Pre Ch		
	Text	 Text		
	EPG	 Shift + Guide		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		

