

 


 

 

 
 
 




 
 

 
 
 
 


 


 







 
 













Original		Replacement		Original		Replacement	
	Power		Power		4		4
	Mute		Mute		5		5
	DTV / Radio		TV/R		6		6
	Senseye		Smart		7		7
	Backlight		Media		8		8
	Info		Info		9		9
	TV Audio		Dual		0		0
	ATV/DTV		Shift + TV/R		AVC		Shift + AV
	Sleep		Sleep		Return		Shift + Back
	Sound		Shift + Dual		Vol +		Vol +
	Picture		Shift + Format		Vol -		Vol -
	Freeze		Pause		Guide		Guide
	Subtitle		Subt		List		List
	Wide		Format		Prog +		Ch +
	1		1		Prog -		Ch -
	2		2		Back		Back
	3		3		Favorite		Pre Ch



