





 



 

 

 

 









 



























 
 

 


















 
 

 
 








 


 





| Original  | Replacement | Original  | Replacement              |
|---|-------------|---|--------------------------|
|      | Power       |      | Power                    |
|      | Mute        |      | Mute / Dimmer            |
|      | V.Format    |      | Shift + Picture / Format |
|      | Sleep       |      | Sleep / Timer            |
|      | Text        |      | Text / Goto              |
|      | TV / Radio  |      | TV/Radio /               |
|      | 1           |      | 1                        |
|      | 2           |      | 2                        |
|      | 3           |      | 3                        |
|     | 4           |     | 4                        |
|    | 5           |    | 5                        |
|    | 6           |    | 6                        |
|    | 7           |    | 7                        |
|    | 8           |    | 8                        |
|    | 9           |    | 9                        |
|    | [[≡]]       |    | Smart / List             |
|    | 0           |    | 0                        |
|    | Recall      |    | Back / Return            |
|    | Vol -       |    | Vol-                     |
|    | Vol +       |    | Vol+                     |
|    | CH -        |    | CH- / Page-              |
|    | CH +        |    | CH+ / Page+              |
|    | Menu        |    | Menu / Home              |
|    | Up          |    | Up                       |
|    | Exit        |    | Exit / Cancel / Clear    |
|    | Left        |    | Left                     |
|   | OK          |   | OK                       |
|  | Right       |  | Right                    |
|  | Page Down   |  | Shift + CH- /            |
|  | Down        |  | Down                     |
|  | Page Up     |  | Shift + CH+ /            |
|  | FAV         |  | Fav / Marker / PC        |
|  | Guide       |  | Guide / EPG / -/-        |
|  | Info        |  | Info / Angle             |





| Original  | Replacement   |
|---|---|
|    |  Display / Media             |
|    |  Red / Netflix / Search      |
|    |  Green / APP / Repeat        |
|    |  Yellow / YouTube / Repeat   |
|    |  Audio / Lang I/II           |
|    |  Blue / Prime Video / Random |
|    |  Subtitle / EQ               |
|    |  Play / Slow                 |
|    |  Stop / Hold                 |
|   |  Pause / Step / Freeze      |
|  |  Rec / Rec Mode            |
|  |  Shift + Text /            |
|  |  Shift + Pause / Step /    |
|  |  << / Tune-                |
|  |  >> / Tune+                |
|  |  Zoom / Size               |
|  |  Shift + Stop /            |

Hold

| Original  | Replacement   |
|---|---|
|  |  I<< / Preset-               |
|  |  >>I / Preset+               |
|  |  Shift + 0                   |
|  |  Picture / Format            |
|  |  Setup / OPT /               |
|  |  Shift + Setup / OPT / Tools |

