


 
 
 

 
 

 
 



 

 

 

 

 
 

 
 


 
 




 

 




 




 

 
 
 

 
 
 
 




 





 





Original	Replacement
 Power	 Power
 i	 DISPLAY INFO
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Favorite	 SHIFT +  FAV PRE-CH Shift + Pre Ch
 Last View	 FAV PRE-CH Pre Ch
 Audio	 SOUND DUAL Dual
 Off Timer	 SHIFT +  Power Shift + Power
 Aspect	 PICTURE FORMAT Format

Original	Replacement
 GUIDE	 GUIDE Guide
 Vol +	 Vol +
 Vol -	 Vol -
 Input TV	 SEARCH TV/R TV/R
 Input AV	 TIMER AV AV
 CH +	 CH +
 CH -	 CH -
 Mute	 MUTE Mute
 Text	 REPEAT TEXT Text
 STTL	 AD SUBT Subt
 Exit	 CLEAR EXIT Exit
 Up	 Up
 Left	 Left
 OK	 OK Ok
 Right	 Right
 Down	 Down
 Menu	 TOP MENU MENU Menu





Original		Replacement		Original		Replacement	
	Back / Return		Back				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<<		<<				
	Play / Pause		Play				
	Play / Pause		Pause				
	>>		>>				
	Stop		Stop				

