 


Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Stop/A/B/C/D/E	 Stop
 <</Preset	 <<
 >>/Preset Up	 >>
 >>I/PTY SEEK	 >>I
 I<</Freq/RDS	 I<<
 Play/PTY SEEK	 Play

Original	Replacement
 Pause	 Pause
 Sleep	 Sleep
 On screen	 Info
 Menu	 Menu
 Set Menu	 D. Menu
 VCR	 Green
 Video	 Yellow
 DVD/CD	 Blue
 Tuner	 Red
 Status	 Media
 Return	 Back
 Test	 Guide
 Mute	 Mute
 Up	 Up
 Enter	 Ok
 Down	 Down
 Right/CH+	 Right

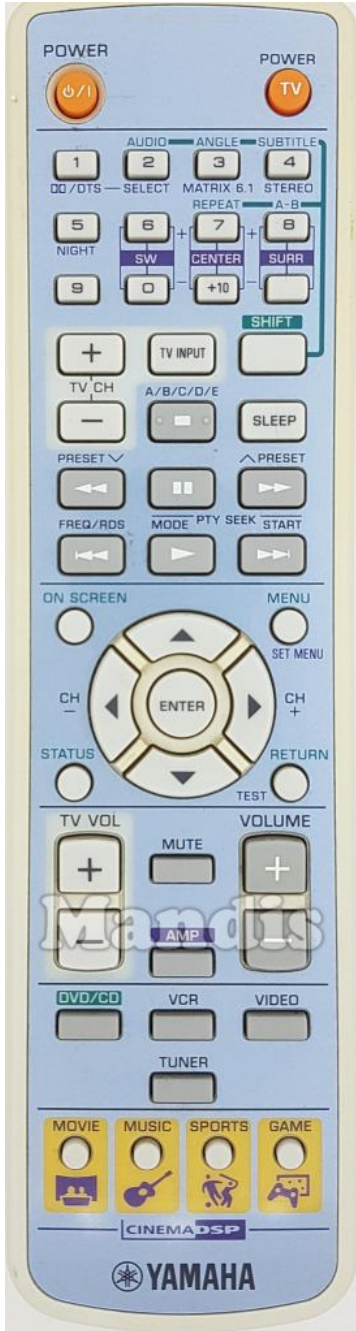 




Original	Replacement
Left/CH-	Left
Volume+	Vol +
Volume-	Vol -
Music	3D
Game	AV
Sports	Eject
Movie	Format
[oo]/DTS	Shift + Dual
Select	List
Matrix 6.1	Smart
Stereo	Options
Night	Shift + 5
SW+	Shift + 7
Center+	Shift + 8
SURR+	Shift + 9
SURR-	Shift + Pre Ch
SW-	Shift + Guide

 
Original	Replacement
Center-	Shift + 0
Angle	Pre Ch
Audio	Dual
Subtitle	Subt
Repeat	Text
A-B	TV/R



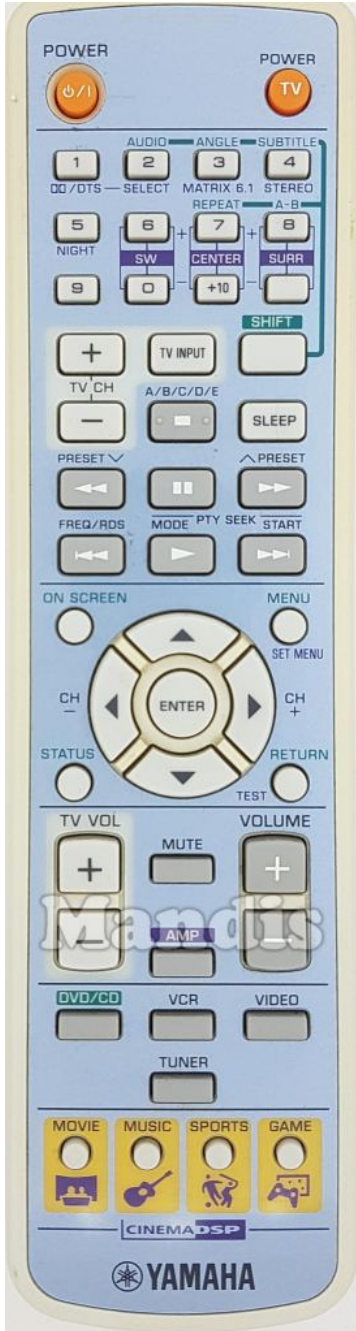 


Original	Replacement	Original	Replacement
Power Tv	Power		
Tv CH+	Ch +		
Tv CH-	Ch -		
Tv Input	AV		
Tv Vol+	Vol +		
Tv Vol-	Vol -		



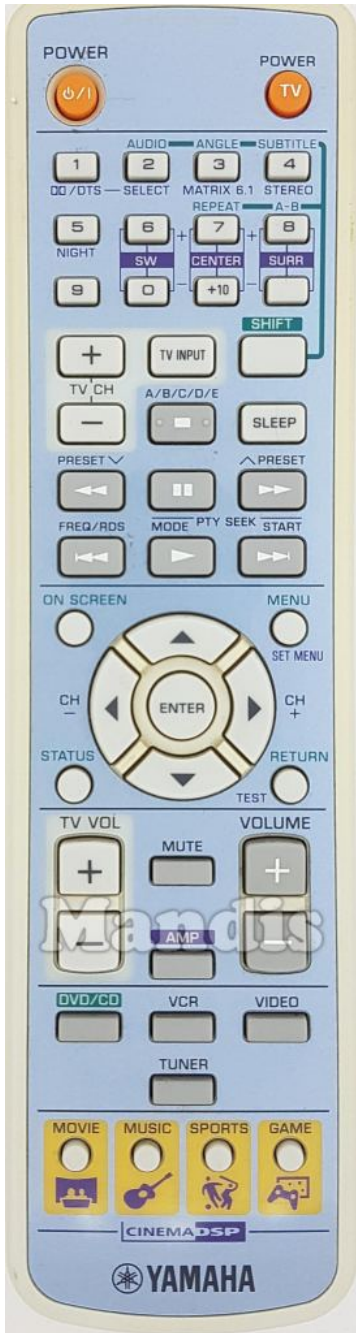

Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 Stop/A/B/C/D/E	 Stop
 <</Preset	 <<
 >>/Preset Up	 >>
 I<<	 I<<
 Play	 Play
 >>I	 >>I
 Volume+	 Vol +
 Volume-	 Vol -

Original	Replacement
 Mute	 Mute
 DVD/CD	 Blue
 VCR	 Green
 Video	 Yellow
 Tuner	 Red

