


 








 
 
 

 

 


 
 




 

Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --/--	 Guide
 Preview	 Pre Ch
 Sound	 Dual
 Picture	 Shift + Format
 Aspect	 Format

Original	Replacement
 Still	 Pause
 S.Mode	 Shift + Dual
 Sleep	 Sleep
 Volume+	 Vol +
 Volume-	 Vol -
 Channel+	 Ch +
 Channel-	 Ch -
 PIP On/Off	 Smart
 Source	 Shift + AV
 Size	 Eject
 Swap	 Back
 Up / P-CH +	 Up
 Down / P-CH -	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu
 Menu	 Ok





Original	Replacement	Original	Replacement
	Exit		Exit
	TV / AV		AV
	Info		Info
	Wiper		Media
	PC Auto		Options
	TTX On/Off		Text
	TTX / Mix		Shift + Text
	Index		Shift + Info
	List / FLOF		Shift + Smart
	Store		TV/R
	Hold		Stop
	Reveal		Shift + Subt
	Subpage		Subt
	Size		Shift + Eject
	Red		Red
	Green		Green
	Yellow		Yellow

Original	Replacement	Original	Replacement
	Blue		Blue

