




Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Mute	 Mute
 Cable/Sat	 Shift + 1
 STB	 Shift + 2
 TV	 Shift + 3
 Disc	 Shift + 4
 Server	 Shift + 5
 AUX	 Shift + 6
 Audio	 Shift + 7
 Game	 Shift + 8
 AVR	 Red
 USB	 Green
 Network	 Yellow
 Radio	 Blue
 Surr.Mode	 Smart
 OSD Menu	 Menu

Original	Replacement
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Back/Exit	 Back
 Info/Option	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0





Original		Replacement		Original		Replacement	
	Clear		Exit		>		>>
	Test		Text		Top Menu		D. Menu
	Vol+		Vol +		Stop		Stop
	Vol-		Vol -		Play		Play
	CH/Tuner Up		Ch +		Pause		Pause
	CH/Tuner Down		Ch -		Prev.CH		Pre Ch
	Delay		Options				
	Sleep		Sleep				
	Tone		Subt				
	Dim		Media				
	P-Scan		Dual				
	Direct		AV				
	Mem		Format				
	RDS		List				
	I<		I<<				
	<<		<<				
	>>		>>				

