


 

 
 
 

 



 
 
 
 
 

 



 

 

 





 
 


 
 

 








 















 
 

 
 

 
 



 







	Original	Replacement		Original	Replacement
	Power		Power		CH +
	ShowView		3D		CH -
	AV		AV		Vol +
	Direct Tv Rec		TV/R		Vol -
	Rec		Rec		HDD
	1		1		DVD
	2		2		<< Slow/Search
	3		3		Slow/Search >>
	4		4		Stop
	5		5		Pause
	6		6		Play
	7		7		Top Menu / Direct Navigator
	8		8		Menu / Play List
	9		9		Up
	0		0		Left
	-/--		Guide		Enter
	Cancel		Exit		Right









 


 
 
 


 










 


 



	Original	Replacement		Original	Replacement
	CH +		Ch +		TV
	CH -		Ch -		DVD
	Vol +		Vol +		SAT
	Vol -		Vol -		AUX
	HDD		Media		PLAY MODE
	DVD		Smart		REC MODE
	<< Slow/Search		<<		PLAY
	Slow/Search >>		>>		PAUSE
	Stop		Stop		STOP
	Pause		Pause		SKIP BACKWARD
	Play		Play		SKIP FORWARD
	Top Menu / Direct Navigator		D. Menu		SOUND
	Menu / Play List		Menu		AD
	Up		Up		SETTINGS
	Left		Left		LIST
	Enter		Ok		DUAL
	Right		Right		SUBT











	Original	Replacement		Replacement
	Power		Power	Power
	CH+		Ch +	Ch +
	CH-		Ch -	Ch -
	1		1	1
	2		2	2
	3		3	3
	4		4	4
	5		5	5
	6		6	6
	7		7	7
	8		8	8
	9		9	9
	0		0	0
	-/--		Guide	Guide
	A		Red	Red
	B		Green	Green
	C		Yellow	Yellow

	Original	Replacement		Replacement
	D		Blue	Blue

