





Original	Replacement
Power	Power
HDD	Shift + Media
DVD	Media
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide
Cancel	Exit
AV	AV
Input Select	Eject

Original	Replacement
Direct Tv Rec	TV/R
ShowView	3D
CH+	Ch +
CH-	Ch -
Vol+	Vol +
Vol-	Vol -
I<< Skip	I<<
Skip >>I	>>I
<< Slow/Search	<<
Slow/Search >>	>>
Pause	Pause
Stop	Stop
Play	Play
Menu / Play List	Menu
Top Menu / Direct Navigator	D. Menu
Functions	Options
Return	Back











 
 













 


 

 

 







Original	Replacement
	 Up
	 Down
	 Right
	 Left
	 Ok
	 Rec
	 Shift + Right
	 Shift + Left
	 Format
	 Text
	 Smart
	 Sleep
	 Shift + AV
	 Pre Ch
	 Subt
	 List
	 Shift + Rec

Original	Replacement
	 Red
	 Info
	 Green
	 Yellow
	 Dual
	 Blue





Original	Replacement
 Power	 Power
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 A	 Red
 B	 Green
 C	 Yellow

Original	Replacement
 D	 Blue

