 
 


 







Original	Replacement
 Power	 Power
 Mute	 Mute
 TV	 Shift + 1
 Rec	 Shift + 2
 DVD	 Shift + 3
 Radio	 TV/R
 Rec Menu	 D. Menu
 [-]/Timeshift	 Format
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0/AV	 0
 EPG/I.Skip	 Guide
 Assist	 Media
 PIP	 3D
 Text/Disc-M	 Text
 Menu	 Menu
 End	 Exit
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left


 
 





 

 


 


 



 

 

 
 








 








	Original	Replacement	Original	Replacement
	OK	Ok		
	Red/C-Set	Red		
	Green/SV	Green		
	Yellow/Zoom	Yellow		
	Blue/Marker	Blue		
	<<	<<		
	Play	Play		
	>>	>>		
	Rec	Rec		
	Pause	Pause		
	Stop	Stop		












 






Original	Replacement
 Power	 Power
 Mute	 Mute
 TV	 Shift + 1
 Rec	 Shift + 2
 DVD	 Shift + 3
 Radio	 TV/R
 Rec Menu	 D. Menu
 [-]/Timeshift	 Format
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0/AV	 0
 EPG/I.Skip	 Guide
 Assist	 Media
 PIP	 3D
 Text/Disc-M	 Text
 Menu	 Menu
 End	 Exit
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left

 



 





 

 



 

 

 








 









Original		Replacement		Original	Replacement
	OK		Ok		
	Red/C-Set		Red		
	Green/SV		Green		
	Yellow/Zoom		Yellow		
	Blue/Marker		Blue		
	<<		<<		
	Play		Play		
	>>		>>		
	Rec		Rec		
	Pause		Pause		
	Stop		Stop		



 



 
 


 


Original	Replacement
 Power	 Power
 Mute	 Mute
 Tv	 Shift + 1
 Rec	 Shift + 2
 DVD	 Shift + 3
 Radio	 TV/R
 Rec Menu	 D. Menu
 [-]/Timeshift	 Format
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0/AV	 0
 EPG/I.Skip	 Guide
 Assist	 Media
 PIP	 3D
 Text/Disc-M	 Text
 Menu	 Menu
 End	 Exit
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left




 

 



 





 

 

 




 













Original	Replacement	Original	Replacement
	OK		Ok
	Red/C-Set		Red
	Green/SV		Green
	Yellow/Zoom		Yellow
	Blue/Marker		Blue
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Pause		Pause
	Stop		Stop



 


 







 



 






Original	Replacement
 TV	 Shift + 1
 Rec	 Shift + 2
 DVD	 Shift + 3
 Radio	 TV/R
 Power	 Power
 Mute	 Mute
 Rec Menu	 D. Menu
 [-]/Timeshift	 Format
 Audio	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0/AV	 0
 EPG/I.Skip	 Guide
 Assist	 Media
 PIP	 3D
 Text/Disc-M	 Text
 Menu	 Menu
 End	 Exit
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left





Original	Replacement	Original	Replacement
	OK		Ok
	Red/C-Set		Red
	Green/SV		Green
	Yellow/Zoom		Yellow
	Blue/Marker		Blue
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Pause		Pause
	Stop		Stop

