


 






 














 

 

 




 



 
 


 



 
 


 





 





| Original  | Replacement   | Original   | Replacement   |
|---|---|--|---|
|  On/Standby        |  Power   |  Disc CD 1  |  1       |
|  Vol+              |  Vol +   |  Disc CD 2  |  2       |
|  Vol-              |  Vol -   |  Disc CD 3  |  3       |
|  X-Bass/Equalizer  |  Smart   |  Disc Skip  |  Media   |
|  Video/AUX         |  Red     |  I<</<< CD  |  I<<     |
|  Tape (1<->2)      |  Blue    |  >>/>>I CD  |  >>I     |
|  Tuner(Band)       |  Green   |  Stop CD    |  Stop    |
|  CD                |  Yellow  |  Play CD    |  Play    |
|  Rec/Pause Tape 2  |  Rec     |  Memory CD  |  3D      |
|  << Tape 2        |  <<     |  Clear     |  Exit   |
|  >> Tape 2       |  >>    |  Random   |  TV/R  |
|  Play Tape 2     |  Left  |  Pause CD |  Pause |
|  Play Tape 1     |  Right |  |   |
|  Stop Tape       |  Ok    |  |   |
|  Tuner Preset Up |  Ch +  |  |   |
|  Tuner Preset    |  Ch -  |  |   |
|  PTY TI          |  Back  |  |   |

