

















	Original	Replacement		Original	Replacement
	On/Off		Power		
	AUX Input		AV / Input / RDS		
	Digital Input		D.Menu / Top		
	Stereo		Audio / Lang I/II		
	Surround		Eject / Surround		
	Vol+		Vol+		
	Mute		Mute / Dimmer		
	Vol-		Vol-		

	Original	Replacement

