







 




 



 









 









 

 




 







 
 
 




 

 

 










Original	Replacement	Original	Replacement
 Power	 Power	 Up	 Up
 [i+]	 Info	 Left	 Left
 Text ↑ / Stop	 Stop	 OK	 Ok
 Text ↑ / Stop	 Shift + Ch +	 Right	 Right
 Text ↑ / Stop	 Text	 Down	 Down
 Red / <<<	 <<<	 Exit	 Exit
 Red / <<<	 Red	 Back	 Back
 Green / Pause	 Pause	 Vol+	 Vol +
 Green / Pause	 Green	 Vol-	 Vol -
 Yellow / Opt / Play	 Options	 Mute	 Mute
 Yellow / Opt / Play	 Yellow	 P+	 Ch +
 Yellow / Opt / Play	 Play	 P-	 Ch -
 Blue ↓ / >>>	 Blue	 1	 1
 Blue ↓ / >>>	 >>>	 2	 2
 Blue ↓ / >>>	 Shift + Ch -	 3	 3
 EPG	 Guide	 4	 4
 List	 List	 5	 5



 
 




 








 



 









 

 










 

 
 




 


 



 












	Original	Replacement	Original	Replacement
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	I-II	 Dual		
	TV / Radio	 TV/R		
	[_]	 Subt		
	V-Format	 Format		
	V-Output	 AV		
	[< >]	 Shift + Format		
	Menu	 Menu		
	Timer	 Shift + AV		





Original	Replacement	Original	Replacement
 Power	 Power	 OK	 Ok
 [i+]	 Info	 Right	 Right
 Text ↑ / Stop	 Stop	 Down	 Down
 Text ↑ / Stop	 Shift + Ch +	 Exit	 Exit
 Text ↑ / Stop	 Text	 Back	 Back
 Red / <<<	 Red	 Vol+	 Vol +
 Red / <<<	 <<<	 Vol-	 Vol -
 Green / Pause	 Pause	 Mute	 Mute
 Green / Pause	 Green	 P+	 Ch +
 Yellow / Opt / Play	 Yellow	 P-	 Ch -
 Yellow / Opt / Play	 Options	 1	 1
 Yellow / Opt / Play	 Play	 2	 2
 Blue ↓ / >>>	 Blue	 3	 3
 Blue ↓ / >>>	 >>>	 4	 4
 Blue ↓ / >>>	 Shift + Ch -	 5	 5
 Up	 Up	 6	 6
 Left	 Left	 7	 7























 

















 




 


 
 






 

 



 




 








Original	Replacement	Original	Replacement
8	8		
9	9		
0	0		
V-Output	V-Output		
[< >]	TIMER AV		
Menu	PICTURE FORMAT		
I-II	TOP MENU MENU		
	SOUND DUAL		



 


 

 
 
 
 
 


Original		Replacement		Original		Replacement	
	DVD Power		Power		DVD Down		Down
	VCR Power	 + 	Shift + Power		DVD Exit		Exit
	DVD [i+]		Info		DVD Vol+		Vol +
	VCR Stop	 + 	Shift + Stop		DVD Vol-		Vol -
	DVD Stop		Stop		VCR Mute	 + 	Shift + Mute
	VCR <<	 + 	Shift + <<		DVD Mute		Mute
	DVD <<		<<		DVD P+		Ch +
	VCR Pause	 + 	Shift + Pause		VCR P+	 + 	Shift + Ch +
	DVD Pause		Pause		DVD P-		Ch -
	VCR Play	 + 	Shift + Play		VCR P-	 + 	Shift + Ch -
	DVD Play		Play		DVD 1		1
	DVD >>		>>		VCR 1	 + 	Shift + 1
	VCR >>	 + 	Shift + >>		DVD 2		2
	DVD Up		Up		VCR 2	 + 	Shift + 2
	DVD Left		Left		VCR 3	 + 	Shift + 3
	DVD OK		Ok		DVD 3		3
	DVD Right		Right		DVD 4		4






 









 








 












 


 

 

 
 














	Original	Replacement	
	VCR 4	 + 	Shift + 4
	DVD 5		5
	VCR 5	 + 	Shift + 5
	DVD 6		6
	VCR 6	 + 	Shift + 6
	VCR 7	 + 	Shift + 7
	DVD 7		7
	DVD 8		8
	VCR 8	 + 	Shift + 8
	DVD 9		9
	VCR 9	 + 	Shift + 9
	VCR 0	 + 	Shift + 0
	DVD 0		0
	VCR I-II	 	Dual
	DVD [_]	 	Subt
	VCR V-Output	 +  	Shift + AV
	DVD V-Output	 	AV

	Original	Replacement	
	DVD [< >]	 	Format
	VCR [< >]	 +  	Shift + Format
	DVD Menu	 	Menu





Original		Replacement		Original		Replacement	
	Power		Power		3		3
	<<		<<		4		4
	Pause		Pause		5		5
	Play		Play		6		6
	>>		>>		7		7
	Up		Up		8		8
	Left		Left		9		9
	OK		Ok		0		0
	Right		Right		V-Output		AV
	Down		Down		[< >]		Format
	Vol+		Vol +		Menu		Menu
	Vol-		Vol -				
	Mute		Mute				
	P+		Ch +				
	P-		Ch -				
	1		1				
	2		2				

