



Original	Replacement	Original	Replacement
System Power	Power	Level	Smart / List
Standby	Shift + Power	Up	Up
Sleep	Sleep / Timer	Set Menu	Menu / Home
6CH INPUT	Shift + Fav / Marker / PC	A/B/C/D/E	Info / Angle
PHONO	Shift + Guide / EPG / -/-	Mute	Mute / Dimmer
TUNER	Shift + 6	Preset-	I<< / Preset-
CD	Shift + 3	Left	Left
V-AUX	Shift + 7	Select	OK
CBL / SAT	Shift + 0	Preset+	>>I / Preset+
MD / TAPE	Shift + 5	Right	Right
CD-R	Shift + 9	Test	Text / Goto
D-TV / LD	Shift + 1	Down	Down
VCR 1	Shift + 4	On Screen / Display	Display / Media
VCR2 / DVR	Shift + 8	Stereo Effect	Audio / Lang I/II
DVD	Shift + 2	Hall / 1	1
Vol+	Vol+	Church / 2	2
Vol-	Vol-	Jazz Club / 3	3



