 



 


 








 
 









 



 

 
 


 




 
 








Original	Replacement	Original	Replacement
 Power Audio	 Power	 >>/Slow+	 >>
 Power Tv	 Shift + Power	 Stop	 Stop
 Tv/Video	 TV/R	 Pause	 Pause
 Eject	 Eject	 I<<	 I<<
 Display	 Info	 >>I	 >>I
 Dimmer	 Smart	 Up	 Up
 Vol+ Audio	 Vol +	 Down	 Down
 Vol- Audio	 Vol -	 Right	 Right
 CH+ Tv	 Ch +	 Left	 Left
 CH- Tv	 Ch -	 Enter	 Ok
 > USB Memory	 Red	 Back	 Back
 FM/AM	 Green	 Repeat	 Text
 Line	 Yellow	 Clock/Timer	 Shift + AV
 Fade Muting	 Mute	 Play Tuner	 Guide
 K2	 Blue	 I<< Group/Title	 Shift + Ch -
 Play DVD/CD	 Play	 >>I Group/Title	 Shift + Ch +
 <</Slow-	 <<	 Vol+ Tv	 Shift + Right





Original	Replacement
 Vol- Tv	 Shift + Left
 Top Menu/PG	 Shift + Menu
 Menu/PL	 Menu
 Audio	 Dual
 Subtitle	 Subt
 Zoom	 Shift + Eject
 Angle	 3D
 Page	 Shift + Media
 Return	 Shift + Back
 Cancel	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 0	 0
 10/Tv Return	 Shift + Guide
 +10/100+	 Pre Ch
 Set Up	 Media
 3D Phonic	 AV
 HP Surround	 Shift + Subt
 Clear Voice	 List
 VFP	 Options
 Scan Mode	 Format
 QP Link	 Shift + Smart
 Sleep	 Sleep
 A.Standby	 Shift + Red
 Output Level	 Shift + 3D
 Input Level	 Shift + TV/R
 S.WFR Out	 Shift + Mute





 



 


 
 
 
 



 

 

 
 

 

 







 


Original Replacement

 DVD Level	 D. Menu
 Treble+	 Shift + 3
 Treble-	 Shift + 6
 Bass+	 Shift + 1
 Bass-	 Shift + 4
 On Screen	 Shift + Info

Original Replacement





Original		Replacement		Original	Replacement
	Power Tv		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	10/Tv Return		Guide		
	0		0		
	+10/100+		Pre Ch		
	Vol+ Tv		Vol +		
	Vol- Tv		Vol -		
	CH+ Tv		Ch +		
	CH- Tv		Ch -		

