

 


 



 
 






 

 
 


 

 

 

 




 


Original	Replacement
 Standby DVD	 Power
 Standby	 Shift + Power
 Tv AV/Video	 TV/R
 TV Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AUX	 0
 Cancel	 Exit
 Memo/Mark	 Pre Ch
 Tv Vol+	 Vol +

Original	Replacement
 Tv Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 ShowView/Video	 Smart
 Prog/Check	 Sleep
 SAT Timer	 Media
 Timer	 AV
 Top Menu	 Shift + Menu
 Navigation	 List
 Menu	 Menu
 Return	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<<	 I<<

 




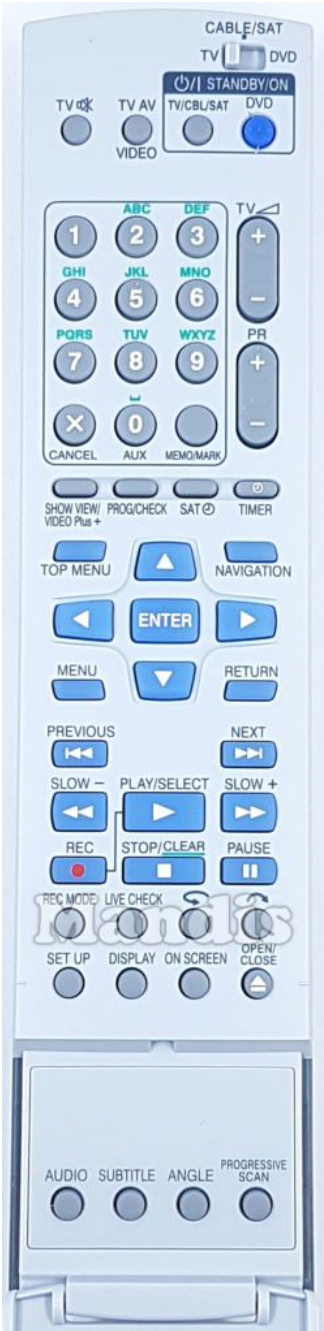


 
 




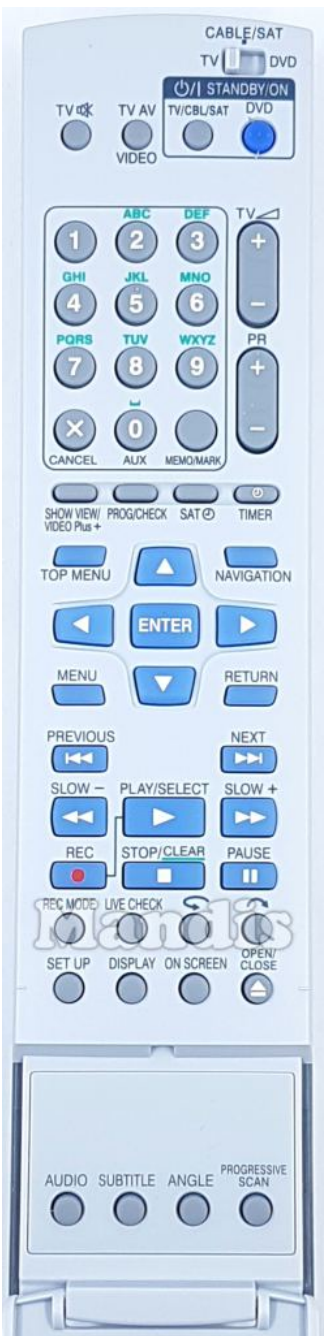


 
 
 






 

 

 





 
 
 



 
Original		Replacement	
	>>I		>>I
	<</Slow-		<<
	Play/Select		Play
	>>/Slow+		>>
	Rec		Rec
	Stop/Clear		Stop
	Pause		Pause
	Rec Mode	+	Shift + Rec
	Live Check		Text
	←		Yellow
	→		Blue
	Set Up		Options
	On Screen		3D
	Display		Info
	Open/Close		Eject
	Audio		Dual
	Subtitle		Subt

Original		Replacement	
	Angle		D. Menu
	Progressive Scan		Format

 




Original	Replacement
 Standby	 Power
 Standby DVD	 Shift + Power
 Mute	 Mute
 Tv/AV/Video	 TV/R
 Vol+	 Vol +
 Vol-	 Vol -
 PR+	 Ch +
 PR-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Replacement
 0	 0
 Cancel	 Back
 Timer	 AV
 Show View/Video Plus	 Smart



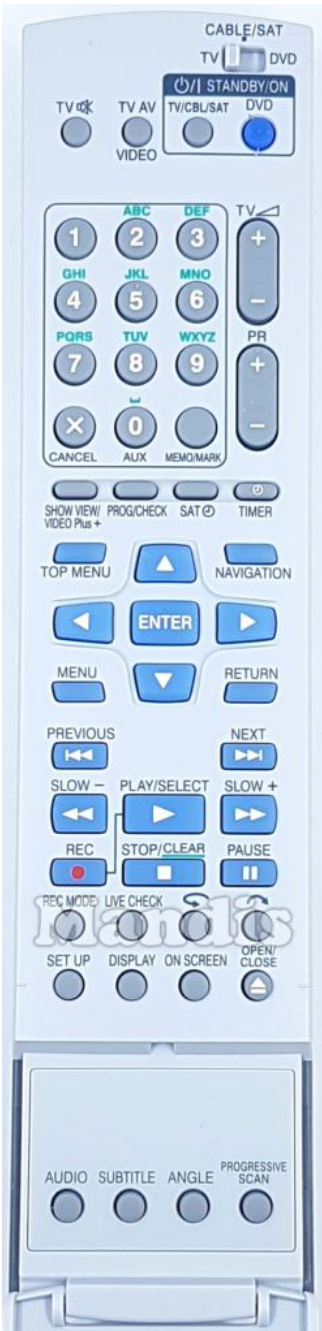

	Original	Replacement	Original	Replacement
	Standby			Power
	Standby DVD			Shift + Power
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0
	PR+			Ch +
	PR-			Ch -
	Tv Vol+			Vol +
	Tv Vol-			Vol -
	Tv Mute			Mute

