




 



 









 













 

 

 





 

 

 

 







 









 

 



 







 









 















 




Original		Replacement		Original		Replacement	
	Power		Power		Prog-		Ch -
	Audio		Dual		Vol+		Vol +
	Tv/VCR		TV/R		Vol-		Vol -
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0/AUX		0				
	X/0000		Exit				
	Timer		AV				
	'/'		Format				
	Prog+		Ch +				





Original	Replacement	Original	Replacement
 Power	 Power	 Prog	 Sleep
 Tv/VCR	 TV/R	 Timer/?	 Subt
 Audio	 Dual	 ' / \"	 Format
 Review	 Smart	 30Sec >>	 3D
 --:--	 Guide	 Play	 Play
 1	 1	 Stop	 Stop
 2	 2	 <<	 <<
 3	 3	 >>	 >>
 4	 4	 Rec	 Rec
 5	 5	 Pause	 Pause
 6	 6	 OK	 Ok
 7	 7	 Menu	 Menu
 8	 8	 Up/Tv Prog+	 Up
 9	 9	 Down/Tv Prog-	 Down
 0/AUX	 0	 Right/>>I/+	 Right
 X/0000	 Exit	 Left/I<</-	 Left
 Timer	 AV	 Start Debut+	 Red




 




 




 















Original	Replacement	Original	Replacement
Start Debut-	Green		
Stop Fin+	Yellow		
Stop Fin-	Blue		
Date+	Ch +		
Date-	Ch -		





	Original	Replacement	Original	Replacement
	Power			
	1			
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Prog+			
	Prog-	