



Original	Replacement		
	Standby		Power
	TV/VCR		Smart / List
	TXT		Text / Goto
	Mute		Mute / Dimmer
	Vol+		Vol+
	Vol-		Vol-
	Info		Info / Angle
	EPG		Guide / EPG / -/-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Menu		Menu / Home
	Exit		Exit / Cancel / Clear
	Source		AV / Input / RDS
	Tv/Rad		TV/Radio /
	Up		Up
	CH+		CH+ / Page+

Original	Replacement		
	Down		Down
	CH-		CH- / Page-
	Left/FAV-		Left
	Right/FAV+		Right
	Enter		OK
	←		Back / Return
	HH:MM		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Original		Replacement	
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Fav		Fav / Marker / PC
	RGB		Setup / OPT /
	Audio		Audio / Lang I/II
	Lang		Shift + Audio / Lang I/II
	Red/Repeat		Red / Netflix / Search
	Green/A-B		Green / APP / Repeat
	Yellow/Zoom		Yellow / YouTube / Repeat
	Blue/Subtitle		Blue / Prime Video / Random

Original		Replacement	

