




































 

























Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	i		Info / Angle
	0/AV		0
	Mute		Mute / Dimmer
	Up		Up
	P+		CH+ / Page+
	Vol+		Vol+
	Right		Right
	Vol-		Vol-
	Left		Left
	OK		OK
	P-		CH- / Page-
	Down		Down
	AUX		Shift + 7
	TXT		Text / Goto
	Red/Picture		Red / Netflix / Search
	Green/Timer		Green / APP / Repeat
	Yellow/Format		Yellow / YouTube / Repeat
	Blue/Audio		Blue / Prime Video / Random
	Colour-		<< / Tune-
	Colour+		>> / Tune+
	Brightness-		I<< / Preset-
	Brightness+		>>I / Preset+



























Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	1		1		Left		Left
	2		2		OK		OK
	3		3		P-		CH- / Page-
	4		4		Down		Down
	5		5		AUX		Shift + 7
	6		6		TXT		Text / Goto
	7		7		Red/Picture		Red / Netflix / Search
	8		8		Green/Timer		Green / APP / Repeat
	9		9		Yellow/Format		Yellow / YouTube / Repeat
	i		Info / Angle		Blue/Audio		Blue / Prime Video / Random
	0/AV		0		Colour-		<< / Tune-
	Mute		Mute / Dimmer		Colour+		>> / Tune+
	Up		Up		Brightness-		I<< / Preset-
	P+		CH+ / Page+		Brightness+		>>I / Preset+
	Right		Right				
	Vol+		Vol+				





Original	Replacement	Original	Replacement
	Power		Power
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	P+		CH+ / Page+
	>>		>> / Tune+
	<<		<< / Tune-
	Play		Play / Slow
	P-		CH- / Page-
	AUX		7
	TXT		Text / Goto

