






 





 

 









 

 



 









 

 



 



 

 
 
 

 

 
 
 


 







Original	Replacement	Original	Replacement
 Power	 Power	 PR-	 Ch -
 Red	 Red	 1	 1
 Green/Cass.	 Green	 2	 2
 Yellow/Prog	 Yellow	 3	 3
 Blue/Mem	 Blue	 4	 4
 Violet/Status	 Smart	 5	 5
 Exit	 Exit	 6	 6
 Menu	 Menu	 7	 7
 Up	 Up	 8	 8
 Down	 Down	 9	 9
 Right	 Right	 0	 0
 Left	 Left	 AV	 AV
 OK	 Ok	 Index/Mark	 Info
 Vol+	 Vol +	 0000	 Media
 Vol-	 Vol -	 SP/LP	 Format
 Mute	 Mute	 <<	 <<
 PR+	 Ch +	 Play	 Play








 





 

 





 



 

 

 

 



 



 



 


 






 








	Original	Replacement	Original	Replacement
	>>		>>	
	Rec		Rec	
	Stop		Stop	
	Pause		Pause	





Original	Replacement	Original	Replacement
 Power	 Power	 PR-	 Ch -
 Red	 Red	 1	 1
 Green/Cass.	 Green	 2	 2
 Yellow/Prog	 Yellow	 3	 3
 Blue/Mem	 Blue	 4	 4
 Violet/Status	 Smart	 5	 5
 Menu	 Menu	 6	 6
 Exit	 Exit	 7	 7
 Up	 Up	 8	 8
 Down	 Down	 9	 9
 Right	 Right	 0	 0
 Left	 Left	 AV	 AV
 OK	 Ok		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Mute	 Mute		
 PR+	 Ch +		

