

 





 
 
 
 

 

 

 

 

 
 




 



 
 






 



 
 


 
 






 



 


 
 



 




Original	Replacement	Original	Replacement
 Power	 Power	 >> / >>	 >>
 Open / Close	 Eject	 >> / >>	 >>
 DVD	 Media	 Program	 Sleep
 Display	 Info	 Clear	 Exit
 Disc Menu	 D. Menu	 1	 1
 Up	 Up	 2	 2
 Down	 Down	 3	 3
 Left	 Left	 4	 4
 Enter	 Ok	 5	 5
 Right	 Right	 6	 6
 Setup	 Options	 7	 7
 Top Menu	 Menu	 8	 8
 Pause / Step	 Pause	 9	 9
 Stop	 Stop	 0	 0
 << /  <<	 <<	 Audio	 Dual
 << /  <<	  <<	 Subtitle	 Subt
 Play	 Play	 Mark	 Pre Ch

 


 





 




 
 










 








 
 
 

 
 
 














Original	Replacement	Original	Replacement
 Power	 Power	 Play	 Play
 Eject	 Eject	 >>	 >>
 TV / VCR	 TV/R	 Clear	 Exit
 VCR	 Media	 1	 1
 Output Select	 Shift + AV	 2	 2
 CLK / CNT	 Options	 3	 3
 Up / CH+ / Track+	 Up	 4	 4
 Down / CH- /	 Down	 5	 5
 Left	 Left	 6	 6
 OK	 Ok	 7	 7
 Right	 Right	 8	 8
 i	 Info	 9	 9
 AV	 AV	 0	 0
 Pause / Step	 Pause	 Audio	 Dual
 Stop	 Stop	 Search	 Shift + TV/R
 Rec / OTR	 Rec	 Clock	 Yellow
 <<	 <<	 Repeat	 Text

Original	Replacement	Original	Replacement
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 REC MODE	 PLAY	 PLAY
 PAUSE	 PAUSE	 STOP	 STOP
 >>	 >>	 <<	 <<
 <<	 <<	 EXIT	 EXIT
 DISC NAV	 SOUND	 AD	 SETTINGS
 LIST	 DUAL	 SUBT	 OPT
 PROG	 SEARCH	 PICTURE	 ECO
 SLEEP	 TV/R	 FORMAT	 3D
 E-MANUAL	 REPEAT	 ZOOM	 TIMER
 D.MENU	 TEXT	 AV	 AV
 TOP MENU	 MENU	 DISPLAY	 INFO
 OK	 OK	 RETURN	 BACK
 EXIT	 EXIT	 HOME	 SMART
 VOL +	 VOL +	 APP	 CH -
 VOL -	 VOL -	 MEDIA	 MEDIA
 1	 1	 2	 2
 2	 2	 3	 3
 3	 3	 4	 4
 4	 4	 5	 5
 5	 5	 6	 6
 6	 6	 7	 7
 7	 7	 8	 8
 8	 8	 9	 9
 9	 9	 0	 0
 0	 0	 FAV	 PRE-CH
 GUIDE	 GUIDE	 A	 B
 A	 A	 C	 D
 B	 B	 Mandis SHOP	 Mandis SHOP
 C	 C	 www.mandis.tv	 www.mandis.tv



