


 

 


 



 




 

 

 
 

 

 


 

 





 












 



 





 

 



 

 

 

 

 





Original	Replacement	Original	Replacement
 Power	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Source	 AV / Input / RDS
 2	 2	 CH-	 CH- / Page-
 3	 3	 Up	 Up
 4	 4	 Left	 Left
 5	 5	 OK	 OK
 6	 6	 Right	 Right
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Down	 Down
 9	 9	 Menu	 Menu / Home
 CH.List	 Smart / List	 Rec	 Rec / Rec Mode
 0	 0	 Timeshift	 Shift + Pause / Step /
 Recall	 Back / Return	 Timer	 Shift + Sleep / Timer
 Vol+	 Vol+	 Rec.List	 Shift + Smart / List
 PIC.Mode	 Picture / Format	 Red	 Red / Netflix / Search
 S.Mode	 Sound / Title	 Green	 Green / APP / Repeat









Original	Replacement	Original	Replacement
 Power	 Mute	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG UII	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	 AV INPUT
 HOME	 ANGLE	 MENU	 INFO
 CLEAR	 RETURN	 EXIT	 BACK
 CANCEL	 LIST	 + VOL	 CH PAGE
 TV	 SMART	 MEDIA	 DISPLAY
 DVD	 TAPE	 CD - STB	 1
 VIDEO	 TUNER	 1	 2
AUX - HDD	USB	BLUETOOTH	3
GUIDE EPG	HDMI - BAT	PC	4
NETFLIX	APP	FAV MARKER	5
SEARCH	REPEAT	REPEAT A-B	6
REPEAT	REPEAT A-B	RANDOM	7
NETFLIX	APP	REPEAT	8
SEARCH	REPEAT	REPEAT A-B	9
NETFLIX	APP	REPEAT	0
SEARCH	REPEAT	REPEAT A-B	GUIDE EPG
NETFLIX	APP	REPEAT	REPEAT A-B
SEARCH	REPEAT	REPEAT A-B	RANDOM
NETFLIX	APP	REPEAT	REPEAT A-B
SEARCH	REPEAT	REPEAT A-B	RANDOM





Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Aspect	 Shift + Picture / Format
 Tv/Radio	 TV/Radio /
 Sleep	 Sleep / Timer
 Subtitle	 Subtitle / EQ
 Index	 Info / Angle
 Reveal	 D.Menu / Top
 Audio	 Audio / Lang I/II
 Display	 Display / Media
 Text	 Text / Goto
 Size	 Zoom / Size
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Subpage	 Setup / OPT /
 Stop	 Stop / Hold
 Hold	 Shift + Stop / Hold

Hold

Original	Replacement
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

