 
 
 
 

 

 
 







Original	Replacement	Original	Replacement
 Power	 Power	 Vol +	 Vol +
 Input	 AV	 Vol -	 Vol -
 TV / TXT	 Text	 Menu	 Menu
 Cancel	 Shift + Exit	 Mute	 Mute
 Reveal	 Smart	 Up	 Up
 Nicam / A2	 Options	 Left	 Left
 Hold	 Stop	 OK	 Ok
 Size	 Format	 Right	 Right
 Subpage	 Shift + Subt	 Down	 Down
 Index	 Shift + Info	 DVB	 Media
 Red / TV/Radio	 Red	 Exit	 Exit
 Red / TV/Radio	 TV/R	 1	 1
 Green	 Green	 2	 2
 Yellow	 Yellow	 3	 3
 Blue	 Blue	 4	 4
 CH +	 Ch +	 5	 5
 CH -	 Ch -	 6	 6





Original	Replacement
7	7
8	8
9	9
0	0
-/--	SHIFT + -/-- Guide
Recall	RETURN BACK Back
Picture	SHIFT + PICTURE FORMAT Shift + Format
Sound	SHIFT + SOUND DUAL Shift + Dual
Sleep	PROG SLEEP Sleep
Subtitle	AD SUBT Subt
Language	SOUND DUAL Dual
Display / Info	DISPLAY INFO Info
Zoom	ZOOM Eject
Text	SHIFT + REPEAT TEXT Shift + Text
FAV	FAV PRE-CH Pre Ch
EPG	-/-- GUIDE Guide
FAV -	LEFT Arrow I<<

Original	Replacement
FAV +	RIGHT Arrow >>I

