 

 


 

 
 

 
 
 

 
 
 
 
 
 
 
 
 
 


 
 


 
 
 
 




Original	Replacement
 Power	 Power
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Search	 TV/R
 Prog/Direct	 Sleep
 Clear	 Exit
 Call	 Pre Ch

Original	Replacement
 Dimmer	 Shift + Info
 YouTube	 Media
 Netflix	 Shift + Smart
 Vidu	 Shift + Media
 Info	 Info
 Home	 Smart
 Power AMP	 Shift + Power
 Source Up	 Ch +
 Source Down	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Top Menu	 Menu
 Pop Up Menu	 D. Menu
 Return	 Back
 Setup	 Shift + Options
 Up	 Up





Original	Replacement
	
Down	Down
	
Right	Right
	
Left	Left
	
Enter	Ok
	
<<	<<
	
Play	Play
	
>>	>>
	
I<<	I<<
	
Pause	Pause
	
Stop	Stop
	
>>I	>>I
	
Repeat	Text
	
A-B	Shift + Back
	
Random	AV
	
Pure	Format
	
Subtitle	Subt
	
Angle	List

Original	Replacement
	
Audio	Dual
	
Option	Options
	
Red	Red
	
Green	Green
	
Yellow	Yellow
	
Blue	Blue
	
Video Resolution	3D
	
DVD a Page	Shift + AV
	
Disc Layer	Shift + Format
	
Picture Adjust	Shift + 3D

