


 








 
 
 

 

 


 
 






Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 --/--	 Guide
 Preview	 Pre Ch
 Sound	 Dual
 Picture	 Shift + Format
 Aspect	 Format

Original	Replacement
 Still	 Pause
 S.Mode	 Shift + Dual
 Sleep	 Sleep
 Volume+	 Vol +
 Volume-	 Vol -
 Channel+	 Ch +
 Channel-	 Ch -
 PIP On/Off	 Smart
 Source	 Shift + AV
 Size	 Eject
 Swap	 Back
 Up / P-CH +	 Up
 Down / P-CH -	 Down
 Right	 Right
 Left	 Left
 Menu	 Menu
 Menu	 Ok





Original	Replacement
 Exit	 Exit
 TV / AV	 AV
 Info	 Info
 Wiper	 Media
 PC Auto	 Options
 TTX On/Off	 Text
 TTX / Mix	 Shift + Text
 Index	 Shift + Info
 List / FLOF	 Shift + Smart
 Store	 TV/R
 Hold	 Stop
 Reveal	 Shift + Subt
 Subpage	 Subt
 Size	 Shift + Eject
 Red	 Red
 Green	 Green
 Yellow	 Yellow

Original	Replacement
 Blue	 Blue

